

**NOTE: THE OVERRIDE SWITCH ON THE REAR PANEL
IS FOR USE WITH _____ VOLT BATTERIES ONLY.
PRESS THIS SWITCH IF ...**

- (1) No charging voltage is indicated; or
- (2) The indicated charging voltage is too low.

Release override switch every 10 seconds until the correct charging voltage is indicated.

**WARNING! – MAKE SURE THAT THE BATTERY IS BEING CHARGED
AT THE CORRECT VOLTAGE BEFORE LEAVING THE CHARGER
UNATTENDED & ALWAYS CHARGE IN A WELL-VENTILATED AREA.**

AUTOCHARGER 10



POWER

**SILICON
CHIP**

+
BATTERY
CONNECTED

24V +

+ HIGH

12V +

+ MEDIUM

6V +

+ TRICKLE

+ +
BATTERY

CHARGE